

# Dermol IMIS

## Plant-Based Alternative to Volatile Cyclomethicone A Very Favorable Comparison

### Isopropyl Isostearate (and) Methylheptyl Isostearate

### Aesthetic Comparison

Ingredient	Application	After feel	Uses
Cyclopentasiloxane	High spread, fast absorption, very lightweight	Dry, clean, non-oily	AP/DO, Eye Makeup, Hair, Face Makeup, Makeup Removal, Skin, Sun
<b>Dermol IMIS</b>			

### Physical Comparison

Ingredient	Viscosity	Refractive Index	Density	Required HLB
Cyclopentasiloxane	6 cP	1.397	0.96 g/mL	10.4
<b>Dermol IMIS</b>	<b>11 cP</b>	<b>1.445</b>	<b>0.86 g/mL</b>	<b>11.1</b>

### Sustainability Comparison

Ingredient	% Natural	Biodegradability	Global Compliance
Cyclopentasiloxane	0%	NO	NO
<b>Dermol IMIS</b>	<b>90%</b>	<b>YES</b>	<b>YES</b>




*Derived from Nature. Designed by Alzo.*


# Dermol IMIS

## Isopropyl Isostearate (and) Methylheptyl Isostearate

Reduction of TEWL

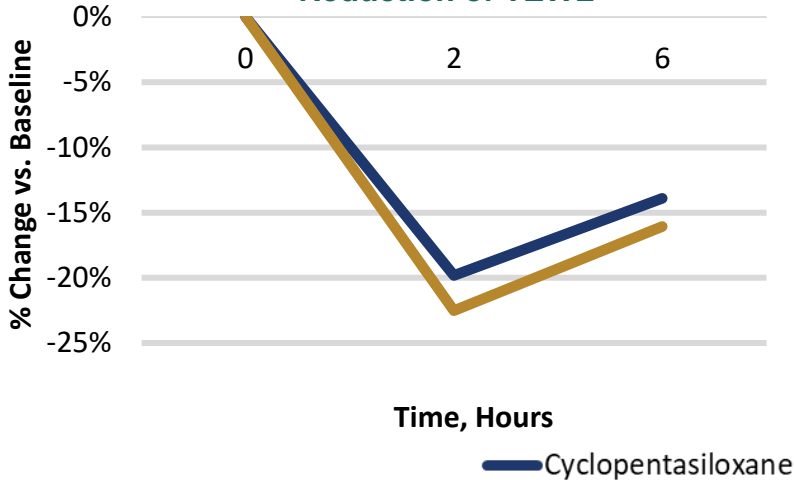

Increase in Hydration

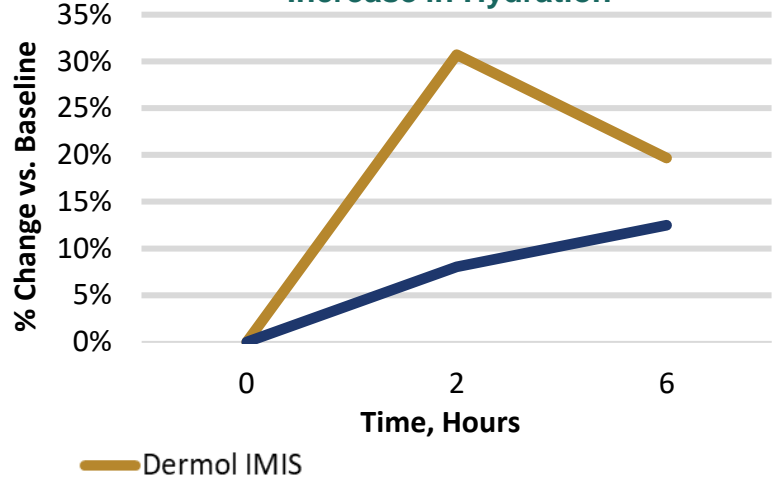

### Natural Concealer Stick

Ingredient	INCI	W/W%
<b>Phase A</b>		
<b>Dermol IMIS</b>	<b>Isopropyl Isostearate (and) Methylheptyl Isostearate</b>	<b>40.00</b>
Unipure White LC 987 ADT-C	Titanium Dioxide (and) etc..	8
Unipure Yellow LC 182 ADT-C	Iron Oxide (CI77492) (and) etc.	0.95
Unipure Red LC 381 ADT-C	Iron Oxide (CI77491) (and) etc.	0.15
Unipure Black LC 989 ADT-C	Iron Oxide (CI77499) (and) etc.	0.10
KOBAMICA S-25	Mica	10.80
<b>Phase B</b>		
Trivent Mango Butter	Mangifera Indica (Mango) Seed Butter	16
BioMade BB	Behenyl Behenate	9
Hetester SSS	Stearyl Stearoyl Stearate	9
Dermowax SB	Stearyl Behenate	6
<b>Total</b>		<b>100.00</b>

95% Naturally Derived

### Natural Bi-Phase Makeup Remover

Ingredient	INCI	W/W%
<b>Phase A</b>		
Water	Water	66.5
--	Polyglyceryl-6 Caprylate	3
Phenoxetol	Phenoxyethanol	0.5
<b>Phase B</b>		
<b>Dermol IMIS</b>	<b>Isopropyl Isostearate (and) Methylheptyl Isostearate</b>	<b>30</b>
<b>Total</b>		<b>100.0</b>

96% Naturally Derived

### Cyclopentasiloxane



### Dermol IMIS



Waterproof Mascara removal. 30% ester/silicone, 70% water. More mascara on the cotton pad with Dermol IMIS means better removability